

Manual Setting for AM Frequency

Your Braun Clock Radio is equipped with a manual setting function allowing you to change the AM Frequency to UK/Europe or US kHz. Please follow below procedures to change the frequency manually.

1. Press the **VOLUME ON/OFF** knob to turn on the Radio.
2. Check the AM frequency by sliding the **AM/FM switch** to AM position.
3. To change the AM frequency, press and hold the **VOLUME ON/OFF** knob and while holding, with a pointed device, press the **RESET** button located at the back of the clock, refer to the illustration on the right.
4. Release the **RESET** button first and after 3 seconds release the **VOLUME ON/OFF** knob.
5. The AM frequency should now be changed to one of the following
 - If Radio was preset to UK/European frequency 531kHz then it will change to 530kHz US frequency and will increment by 10 kHz spacing.
 - If the radio was preset to US frequency 530kHz then it will change to 531kHz UK/European frequency and will increment by 9 kHz spacing.



Each time the batteries are replaced or removed or the unit has been RESET, AM frequency will change to the preset settings and above procedure is required to be repeated.